


Docking of public broadcasting with NVR/DSS pro platform or third-party platform

Instructions & FAQ

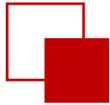

Audio | IP Speaker



DH-VCS-SH30



DH-VCS-SPOE20



DH-VCS-STW30
DH-VCS-STW40

DSS pro





NVR



As DSS System Device Terminal

IP Audio Device Terminal as NVR

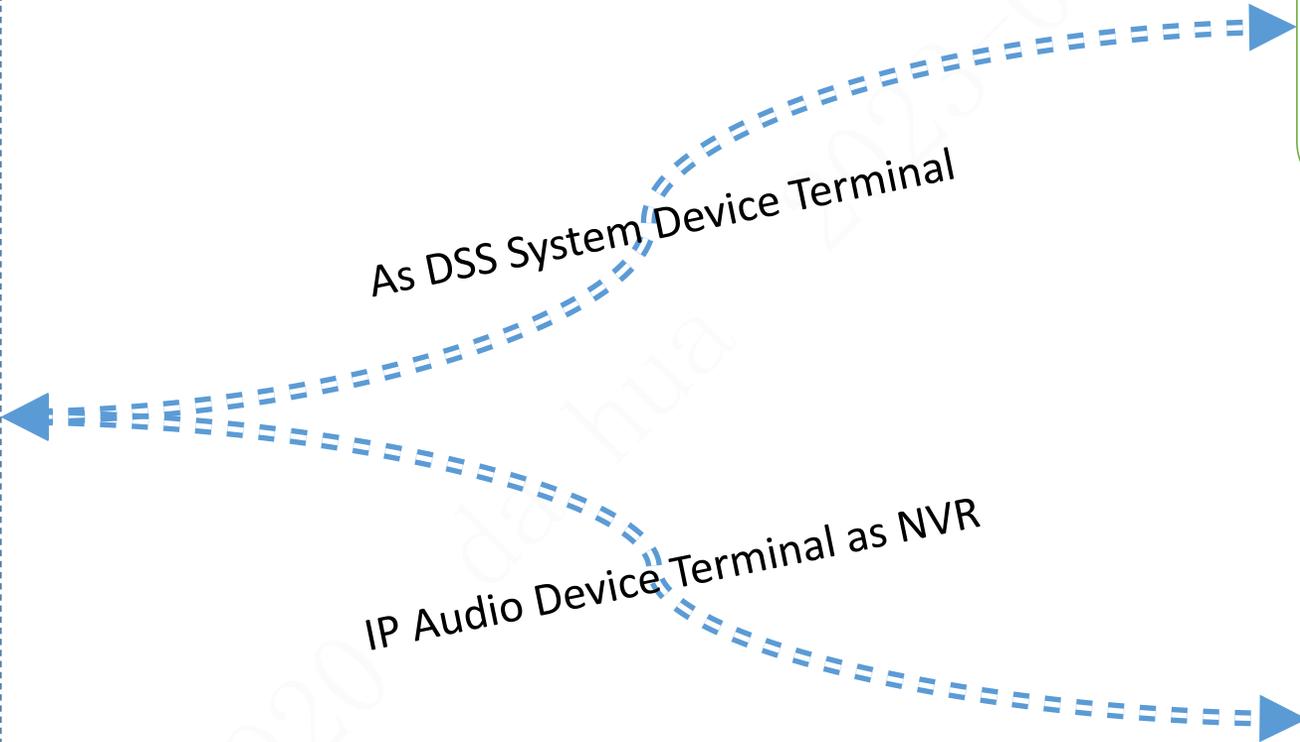

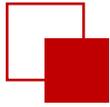

01

**DSS Platform Docking
Instructions**
**NVR docking
instructions**

02


**Third party
platform docking
instructions**

03


FAQ


355920
dahua
2023-06-26

Link DSS Pro

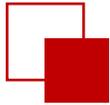

Link DSS Pro | Topology Diagram

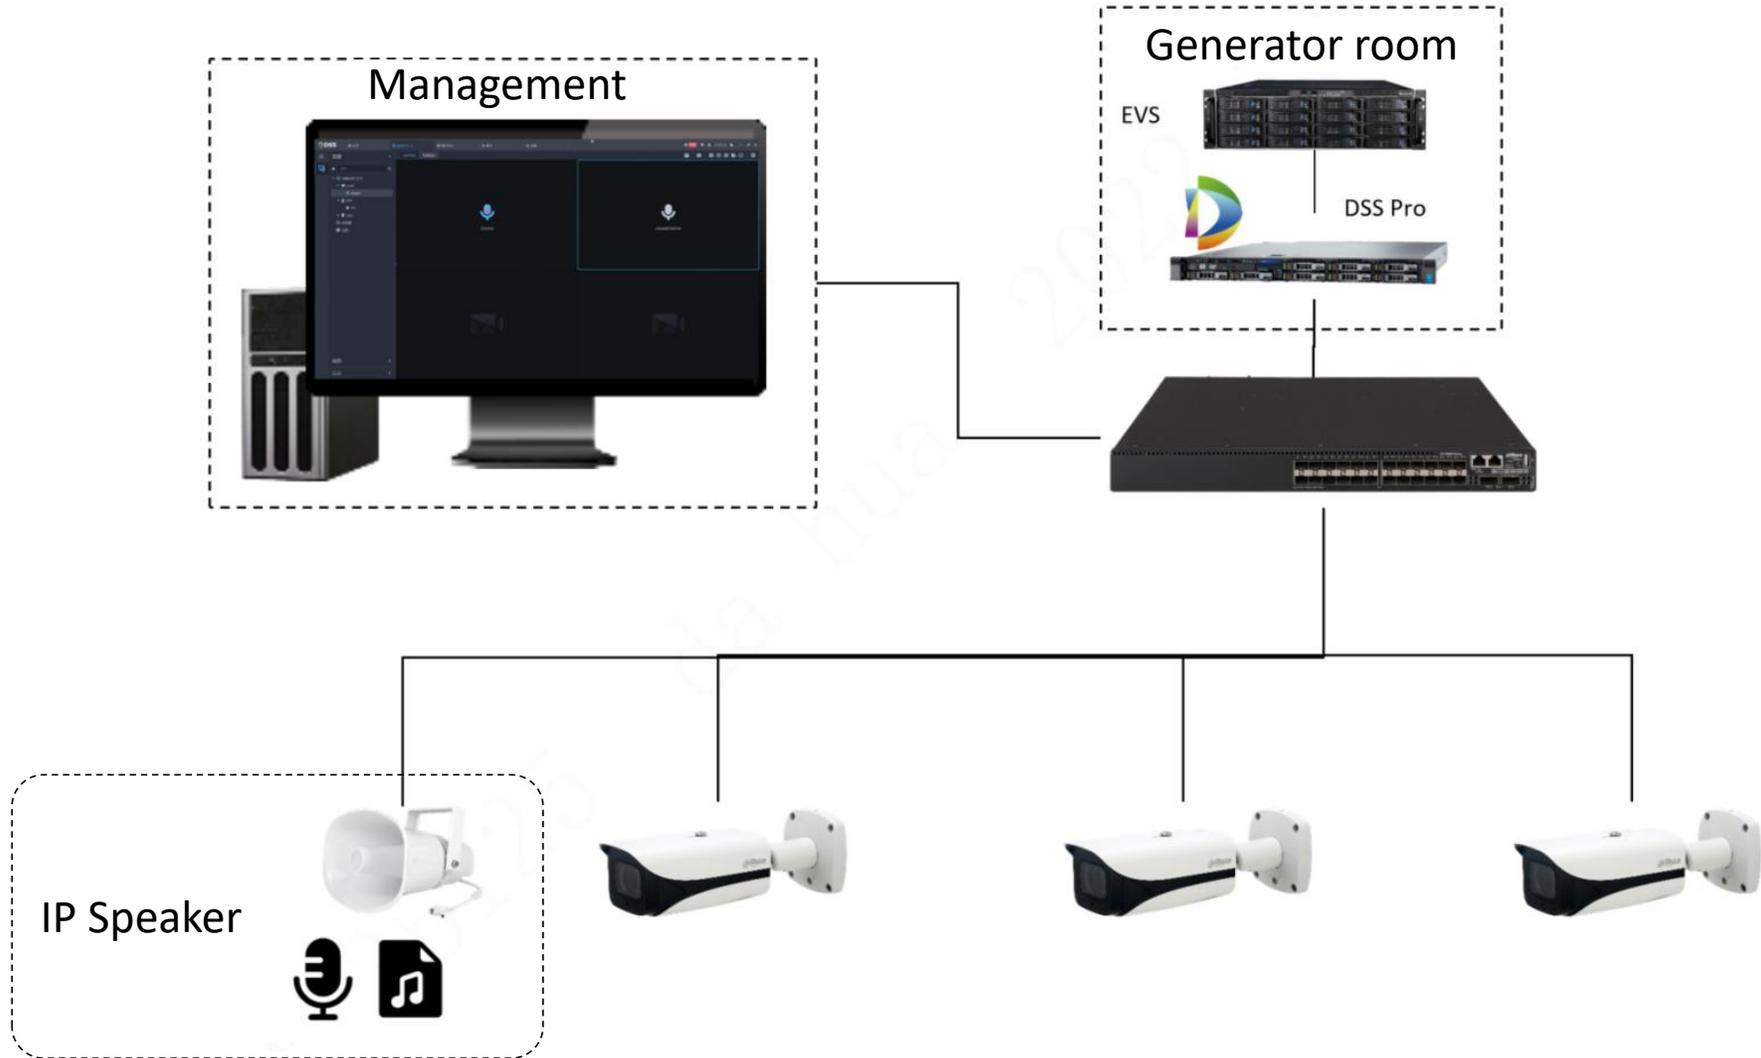


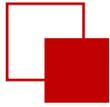


IP Speaker devices need to be added to the platform for management. The device needs to be authorized before use (one license for each device)

Formal License Rules	License Type	No.
One IP Speaker device license for DSS Professional V8, no prerequisite.	device	2.9.03.01.10130


Link DSS Pro | Add IP Speaker device

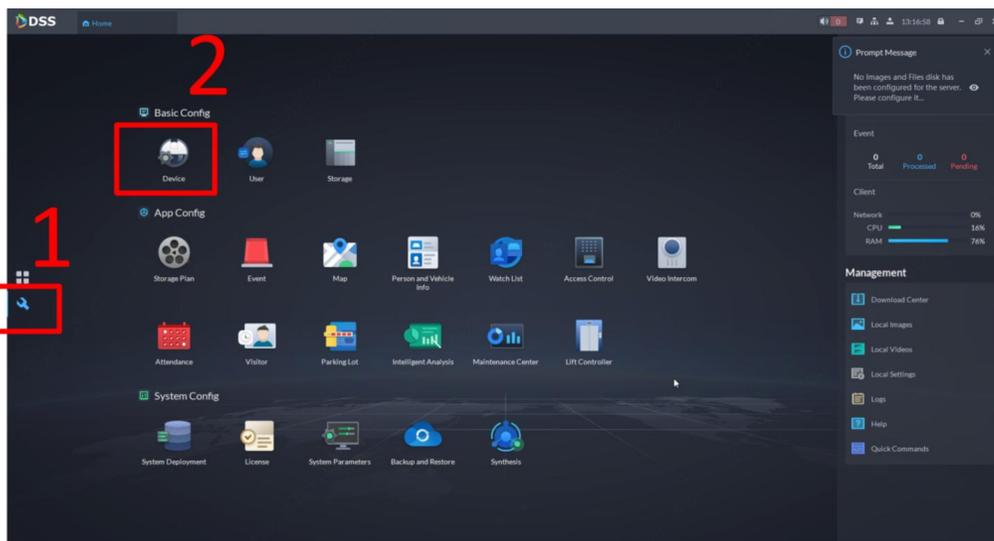


1. Open the DSS interface and switch to the [Configuration] interface
2. Click [Device] in the configuration interface to enter equipment adding

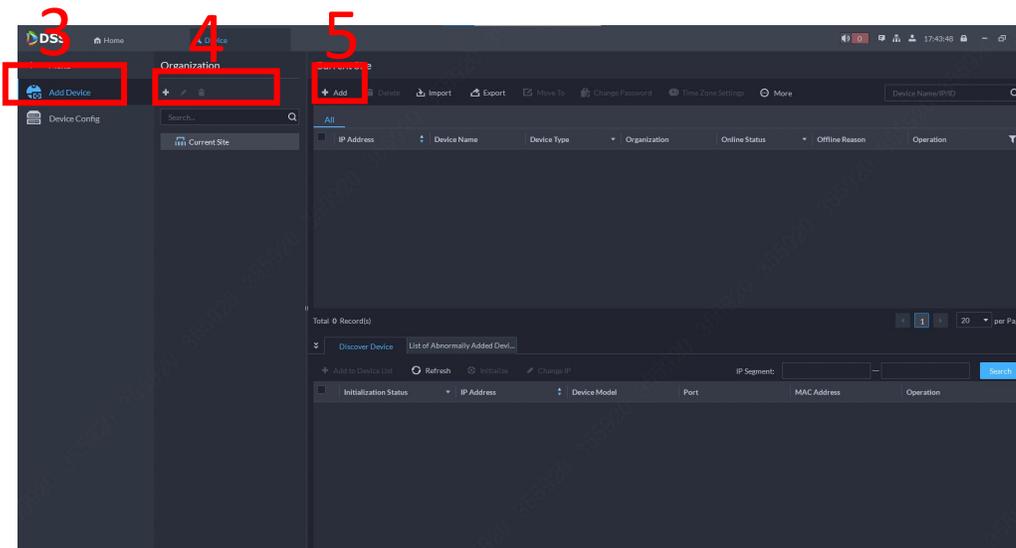

3. Select the Add Device interface
4. Select the target organizational structure node to add
5. Click [+Add] to add equipment

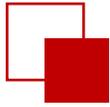

Link DSS Pro | Add IP Speaker device

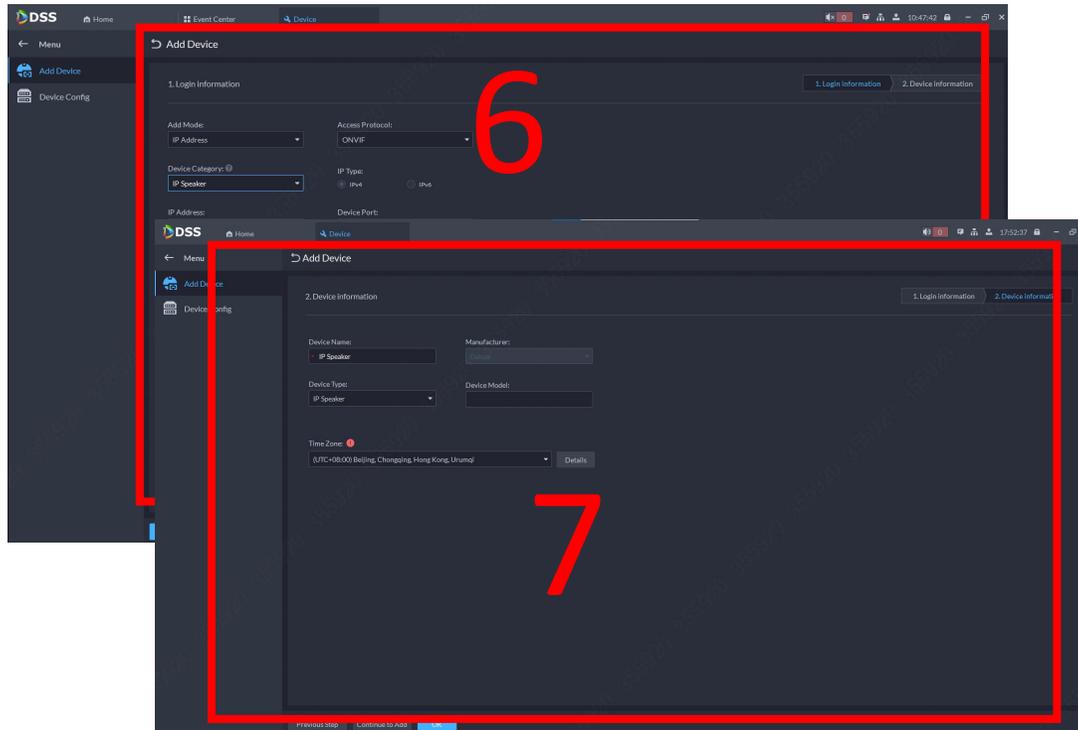


6. Fill in the device login information correctly
7. Get device information

Note:

1. IP Speaker devices only support ONVIF protocol addition
2. One IP Speaker device only corresponds to one audio channel

Link DSS Pro | Video channel binding IP Speaker device

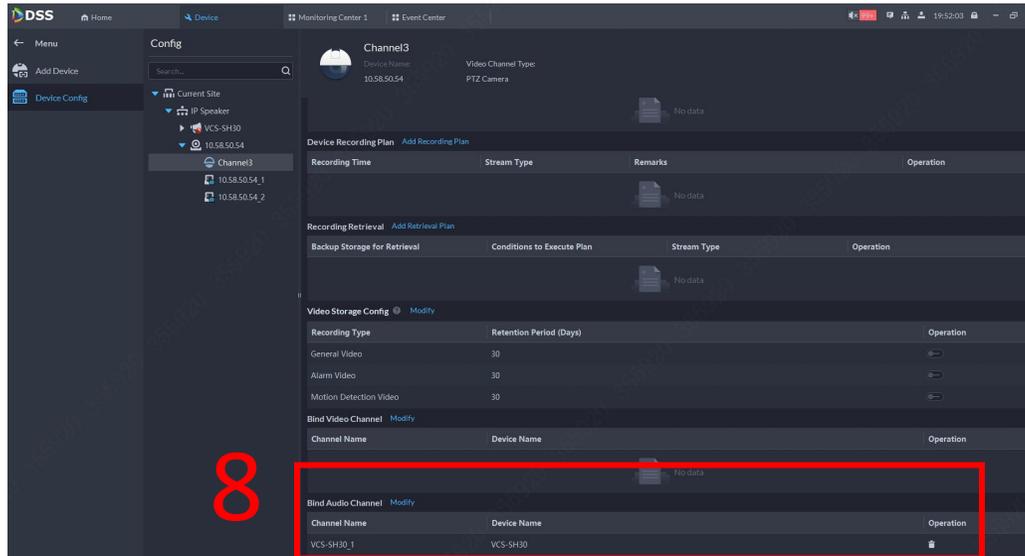


8. Select the video channel device to bind, and then "Bind audio channel"

Note:


1. After the binding is successful, you can initiate a intercom to the IP Speaker audio channel in the real-time preview interface
2. Only one audio channel is bound to a video channel

Link DSS Pro | IP Speaker terminal configuration

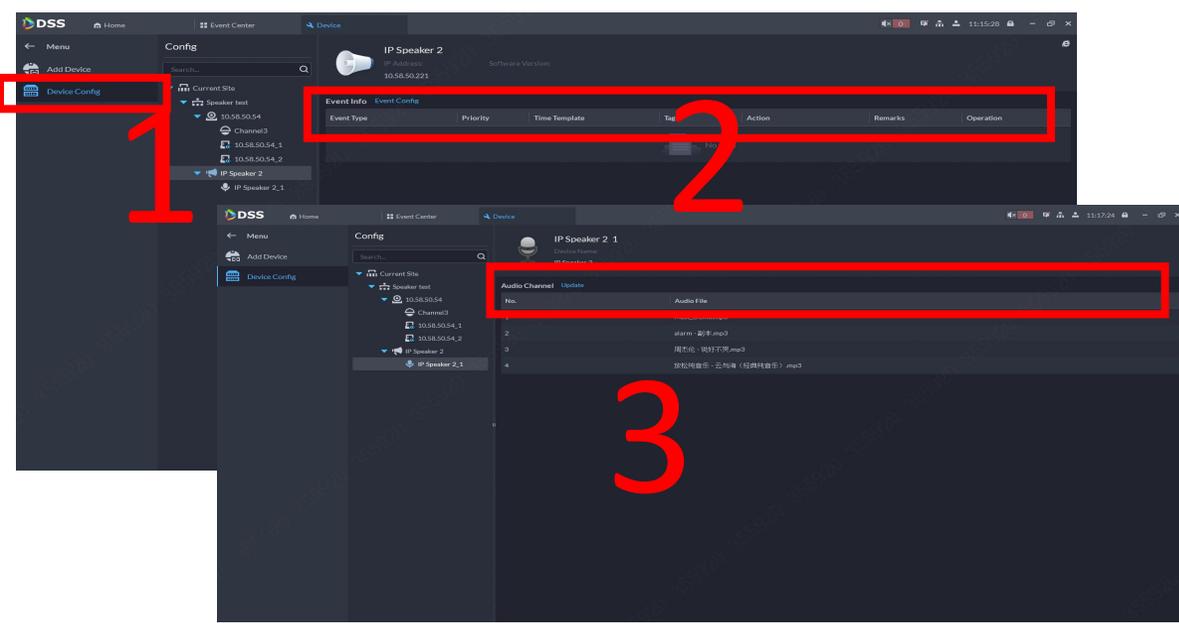


1. Click Device Configuration to configure a single device
2. Configure offline alarm
3. Update the audio file (if the audio file on the IP Speaker device is updated, you can click Update to synchronize)

355920

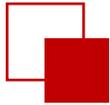

Link DSS Pro | Event linkage audio output to IP Speaker configuration

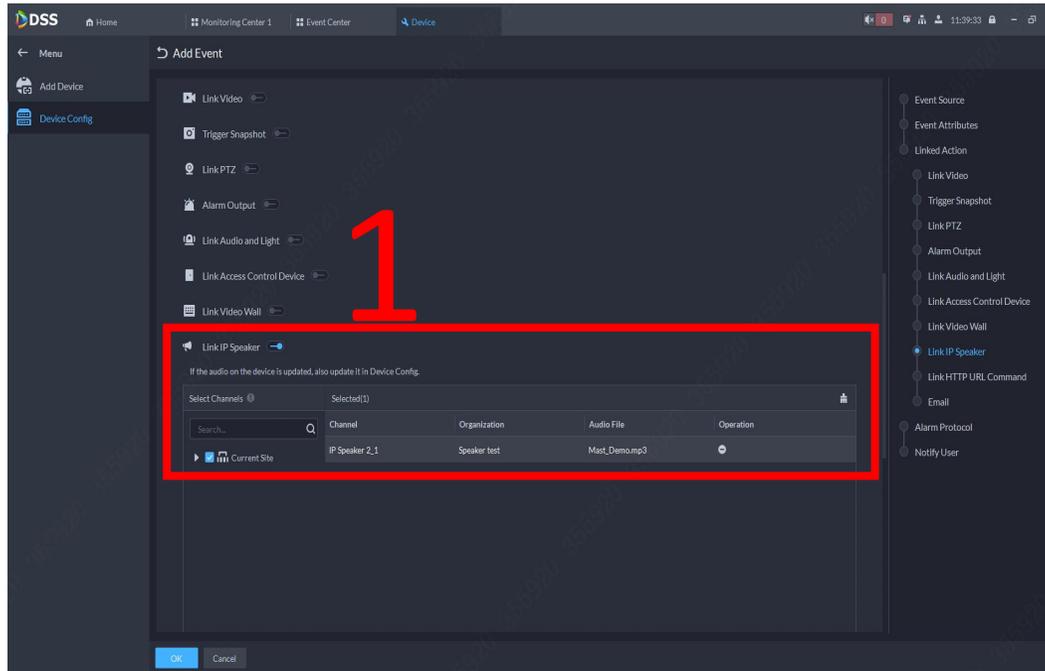


1. Configure the alarm event, select the linkage IP Speaker channel, and select the play file.


Note:

1. Link up to 16 audio files
2. If the IP Speaker audio file is updated, go to [Device Configuration] to update the audio file


Link DSS Pro | Video channel shouting

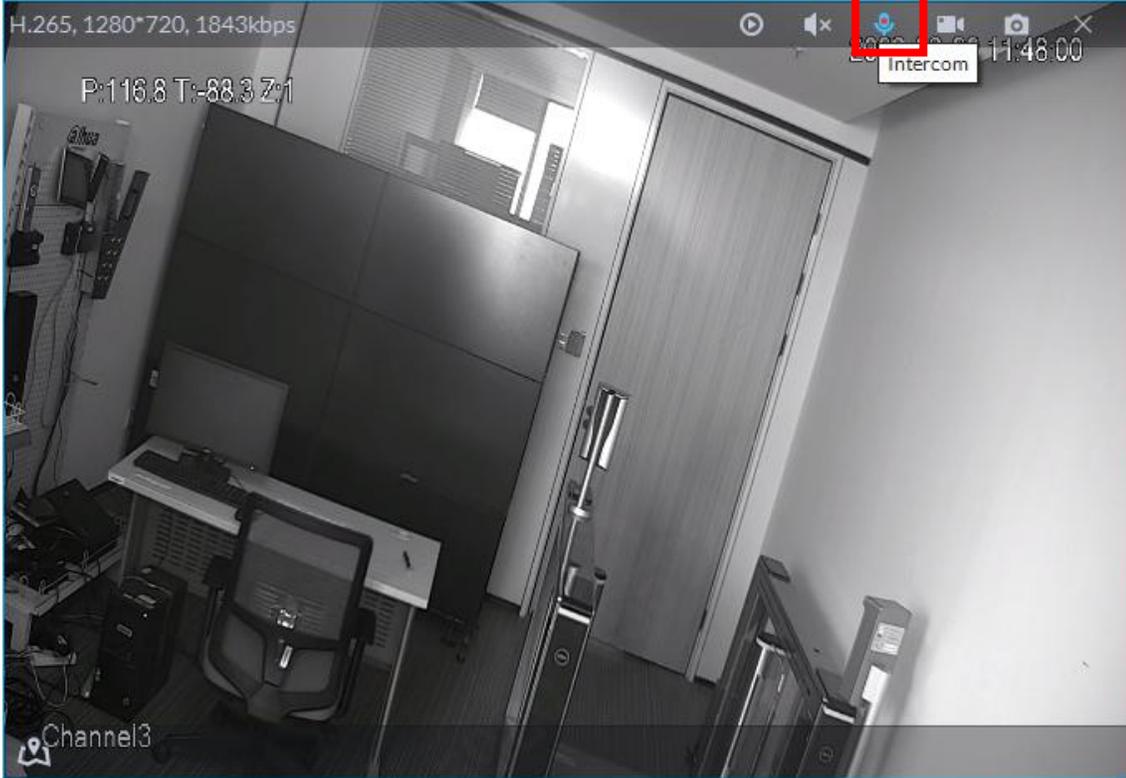


- ① Click the video channel [intercom ] button to initiate voice intercom;
- ② If the video channel is bound to the IP Speaker channel, it will directly talk to the IP Speaker.

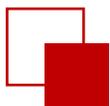


Link DSS Pro | Radio shouts

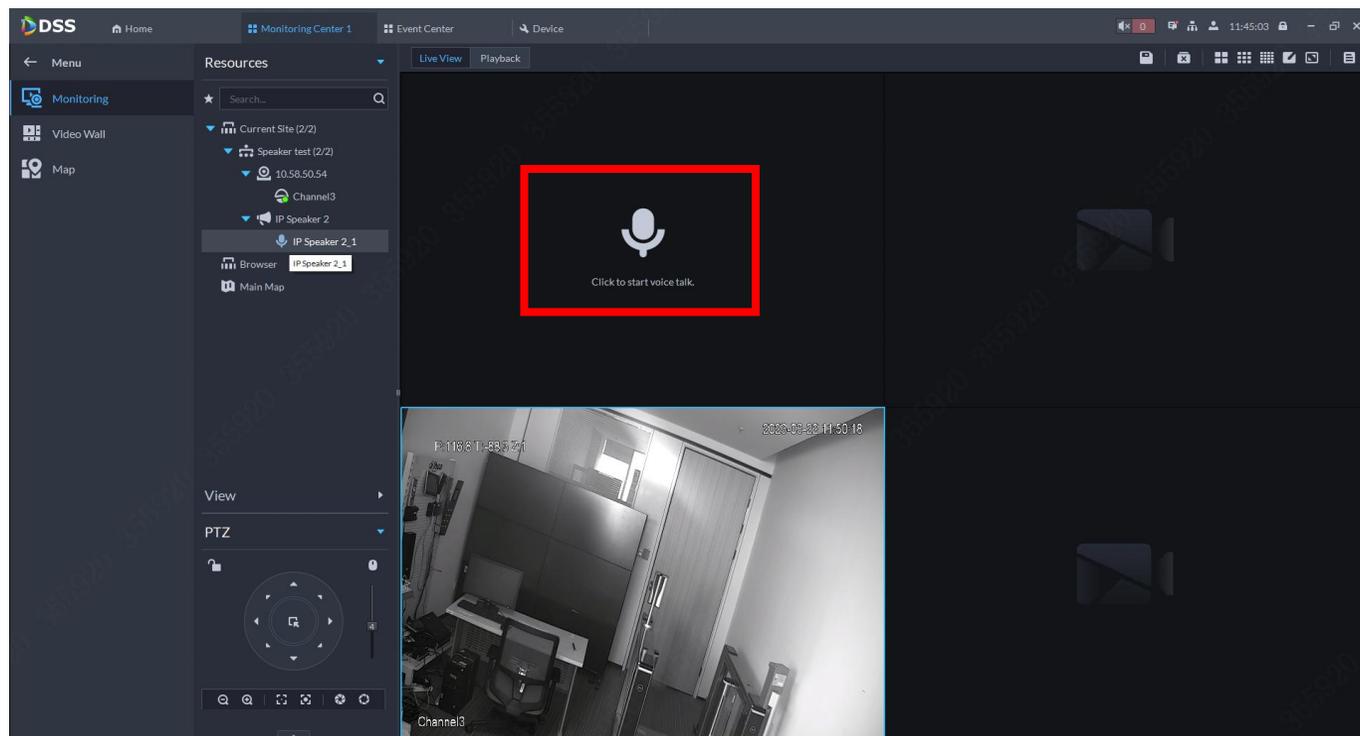

- ① Drag the IP Speaker node in the organization structure to the video window
- ② Click the [intercom ] button to initiate intercom

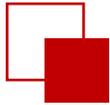

Link DSS Pro | Event linkage intercom

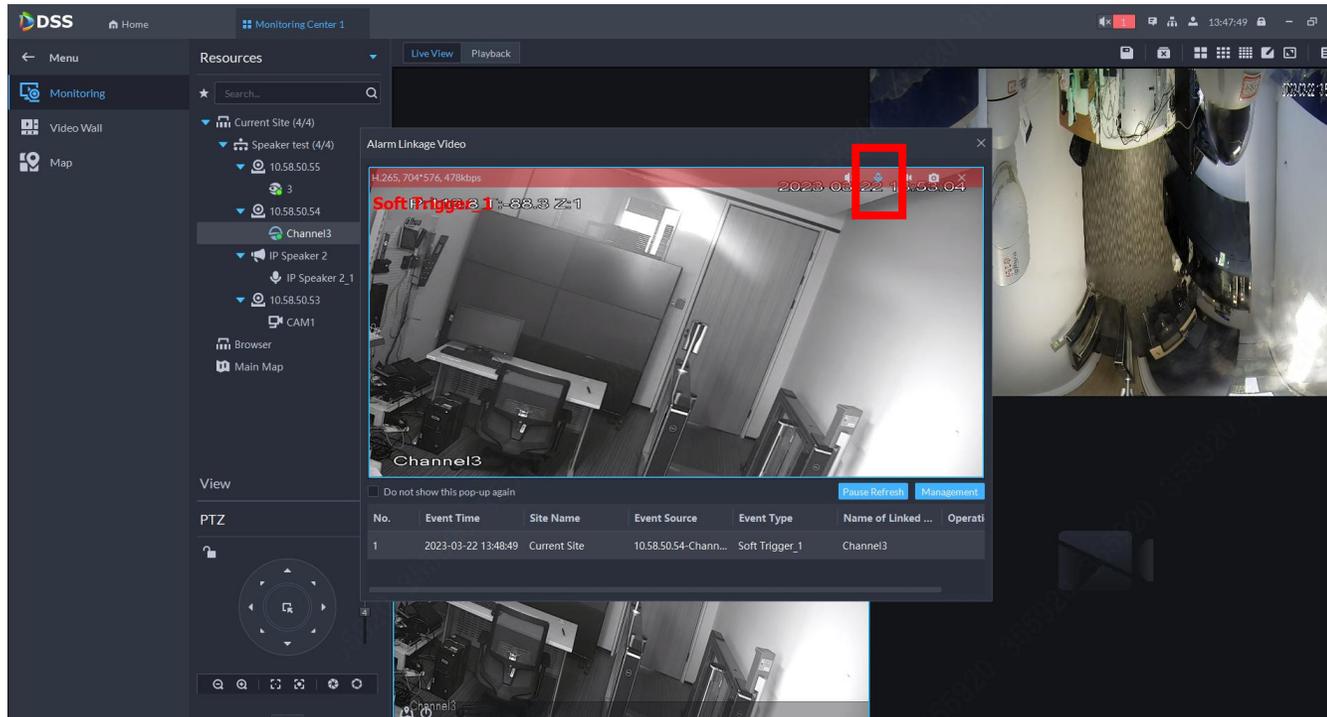


- ① Click the [Intercom ] button in the video pop-up window to initiate voice intercom;
- ② If the video channel is bound to the IP Speaker channel, it will directly talk to the IP Speaker.

Link NVR

355920

da h

2023-06-26

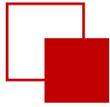

NVR version basic information

Product name : NVR5XXX-4KS2 Series\ NVR5-EI Series

Other models :

If other models of NVR need customized versions, contact the NVR product manager

Supporting baseline plan :

The second half of 2023


Upgrade guide

The upgrade method is the same as the baseline version.


During the upgrade, the equipment will stop relevant services: video recording, network preview, etc. After the upgrade, the device returns to normal after restarting.

Do not power off during the upgrade process, otherwise the equipment will not start normally.

Link NVR | Add IP Speaker device

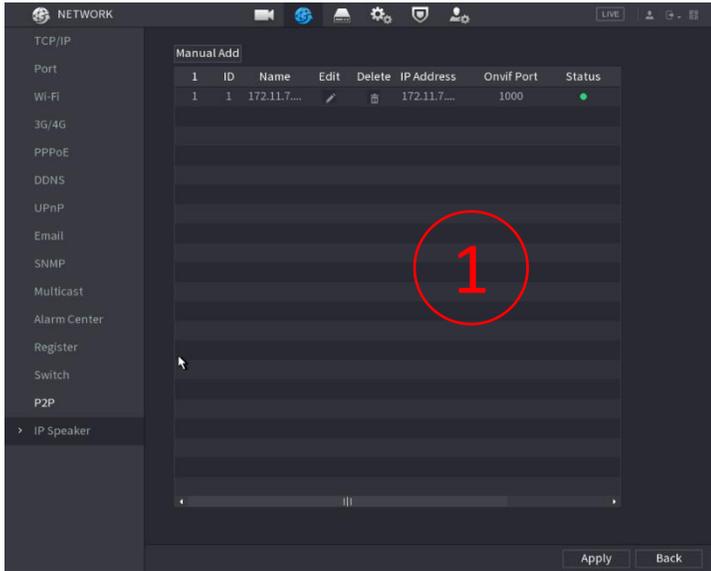

1. Enter the NVR device NETWORK ->IP Speaker menu

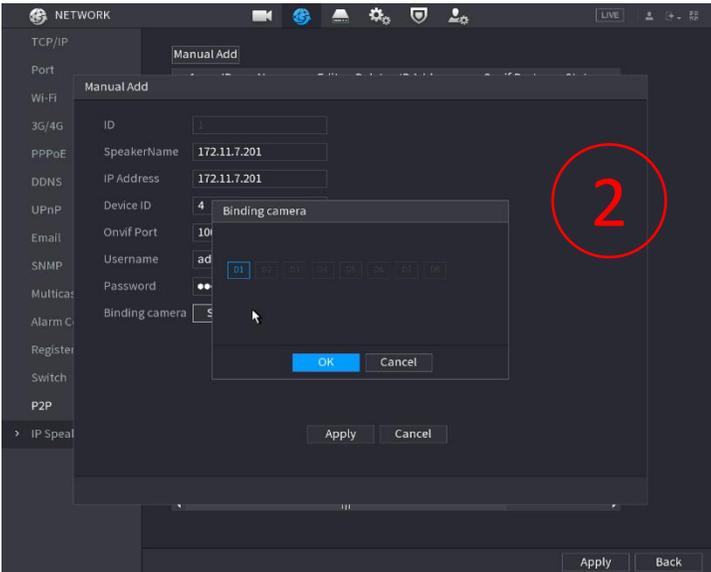

2. Add IP Speaker manually: click the [Add] button, and the following dialog box will pop up. Fill in the IP Speaker connection information and Binding camera information correctly.

Note:

The maximum number of video channels that can add IP Speakers is NVR

Link NVR | Event linkage audio output to IP Speaker



Support the event of alarm linkage audio and output to IP Speaker

Face Detection

Channel: D1
Enable:
Rule: Setting
Face Enhance...:
Schedule: Setting
Alarm-out Port: Setting
Post-Alarm: 10 sec.
Report Alarm: Send Email:
Record Channel: Setting
PTZ Linkage: Setting
Tour: Setting
Buzzer: Log
Alarm Tone: None
IP Speaker: IP Speaker

SMD

Channel: D1
Enable:
Sensitivity: Medium
Face Detect: Effective Target: Human Motor Vehicle
Face Recognition: Camera Audio: Setting Warning Light: Setting
Schedule: Setting Anti-Dither: 5 sec.
Alarm-out Port: Setting Post-Alarm: 10 sec.
Show Message: Report Alarm: Send Email:
Record Channel: Setting
PTZ Linkage: Setting Post-Record: 10 sec.
Tour: Setting Picture Storage
Buzzer: Log
Alarm Tone: None IP Speaker Setting

IVS(Tripwire&Intruder Detection)

1	Enable	Name	Type	Draw	Trigger	Delete
Face	<input type="checkbox"/>	Schedule	Setting			
Face	<input type="checkbox"/>	Alarm-out Port	Setting		Post-Alarm 10 sec.	
IVS	<input checked="" type="checkbox"/>				Report Alarm <input type="checkbox"/> Send Email <input checked="" type="checkbox"/>	
Stere	<input checked="" type="checkbox"/>	Record Channel	Setting			
Videc	<input type="checkbox"/>	PTZ Linkage	Setting		Post-Record 10 sec.	
Crow	<input type="checkbox"/>	Tour	Setting			
Peop	<input type="checkbox"/>	Buzzer	<input checked="" type="checkbox"/> Log			
Heat	<input type="checkbox"/>	Alarm Tone	None		IP Speaker Setting	
ANPR	<input type="checkbox"/>					
SMD	<input type="checkbox"/>					
Databa	<input type="checkbox"/>	Camera Audio	Setting		Warning Light	Setting

Link NVR | Event linkage audio output to IP Speaker



Tick IP Speaker and configure linkage playback: select the audio file to be played, and then click the [Apply] button to save the configuration.

Setting

✓ ID	Name	Status	IP Address	Port	Media
✓ 1	172.11.7....	●	172.11.7.201	1000	⚙️

Apply Back


Media

File Name

Apply Back

Note:


1. The audio file list comes from the IP Speaker device, and the first record is selected by default
2. Priority of audio playback: the obtained audio list is sorted from top to bottom. The audio below will be interrupted and returned to the audio above after triggering the set rules. The audio above will not be interrupted by the audio below

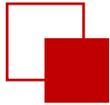

Link NVR | Manage IP Speaker audio files




Menu entry : AUDIO->File Management

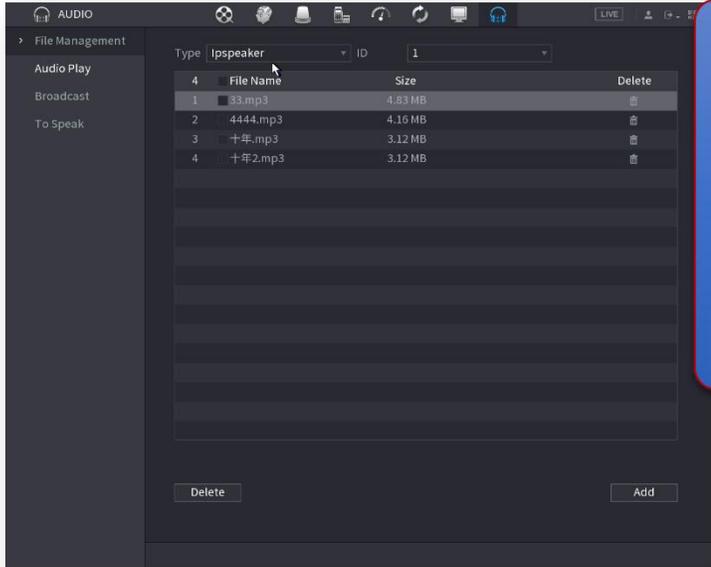

- Delete a single file: click the [] button in the Delete column after the file name
- Delete multiple files: check the list of files to be deleted and click the [Delete] button

- Add file: click the [Add] button in the previous interface to enter the add file interface, select the list of added files, and click the [OK] button

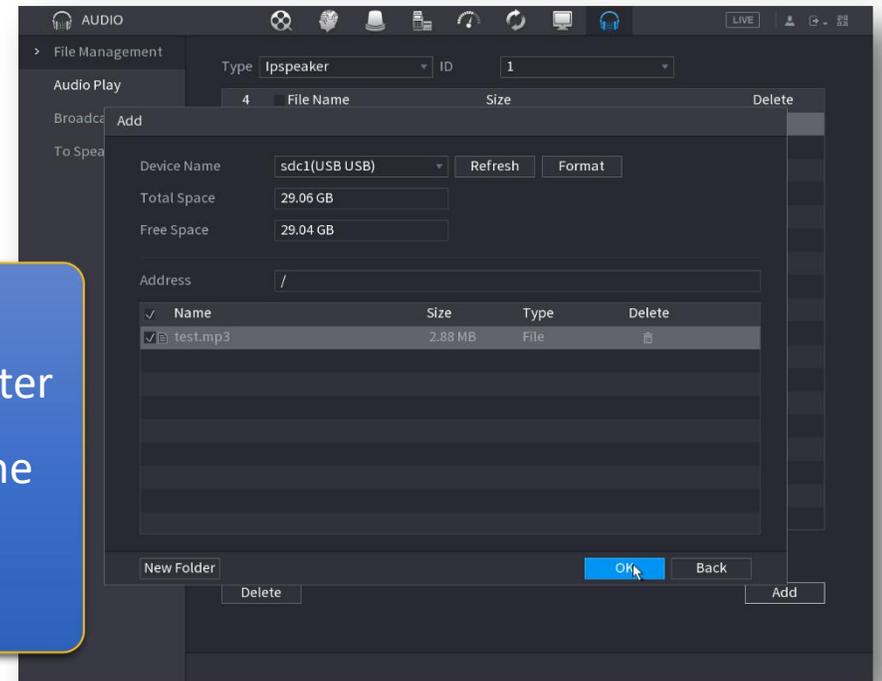


Video channel shouting :

- ① Select the real-time preview interface of video channel and click the [Speaker ] button (move the mouse to the button to prompt Speaker)
- ② Call the channel bound IP Speaker (the input of NVR device Mic IN is sent to the bound IP Speaker)
- ③ In the shouting state, the [Speaker ] button is highlighted.

IP Speaker Radio Call :

- ① AUDIO interface 【To Speaker】
- ② Click the button 【】 to make a live broadcast call (input from the NVR device Mic IN is passed to IP Speaker)

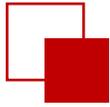

01

**DSS Platform
Docking
Instructions


NVR docking
instructions**

02

**Third party
platform docking
instructions**

03

FAQ

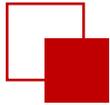

Third party platform docking instructions



DH-VCS-SH30




DH-VCS-SPOE20



DH-VCS-STW30
DH-VCS-STW40

Provide a standardized open interface for IP Speaker device management and use

355920 da hua 2023-06-26

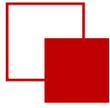

01

**DSS Platform
Docking
Instructions**


**NVR docking
instructions**

02

**Third party
platform docking
instructions**

03

FAQ

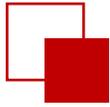

FAQ

Q

What is the default value for ONVIF protocol?

A

1000

Q

What if the built-in storage space is insufficient?

A

TF card expansion space provided on the back of the product.

Q

When can NVR have a baseline model?

A

Currently, the plan is for the second half of the year. It is temporarily recommended to provide a customized process before shipping.



「 让社会更安全 让生活更智能 」

ENABLING A SAFER SOCIETY AND SMARTER LIVING